

A little prep. A lot of sparkle.

Prepare a clean, dry surface. For acrylic, remove the protective film and secure your checked, actual-size pattern underneath.



01 Apply a little glue

Apply a small amount to the area you want to decorate. Work on a small section at a time.



02 Find the fine round tip

Use the narrow metal end with the small rounded tip shown here.



03 Load the silicone putty

Press the fine tip into the silicone putty and turn it once to pick up a little putty.

Turn over: check the tip, pick up a stone and place it on your pattern.


Pick. Place. Make it yours.

Putty picks up the stone. Glue keeps it in place.




04 Check the prepared tip

A small amount of putty should cover the rounded end, as shown in the close-up.

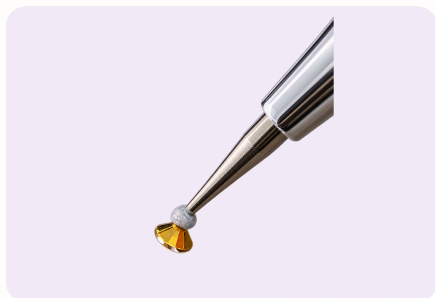

05 Pick up one rhinestone

Touch the putty to the faceted top of one stone. Keep its flat back facing the glued surface.

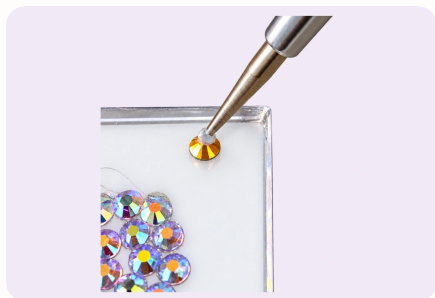

06 Place, press and lift

Match your pattern and place the whole flat back on the glued board, clear of its edges. Press gently, lift the pen, then let the glue cure.



WEBSITE / CREATE YOUR NUMBERED PATTERN

wallfid.pages.dev

Allow the adhesive to cure as directed on its label.